




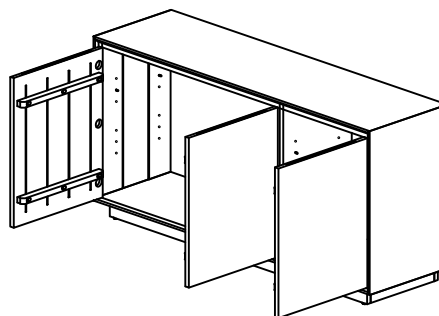



BRONTE SIDEBORD 3 DOORS 1600x450x780
ASSEMBLY INSTRUCTION


loungelovers

HARDWARE LIST

1		Plastic Links	02pcs
2		Anchors	04pcs
3		Screw M4x30	04pcs
4		Drawstring	02pc
5		Pin Shelf	16pcs




A x 1




B x 2




C x 2

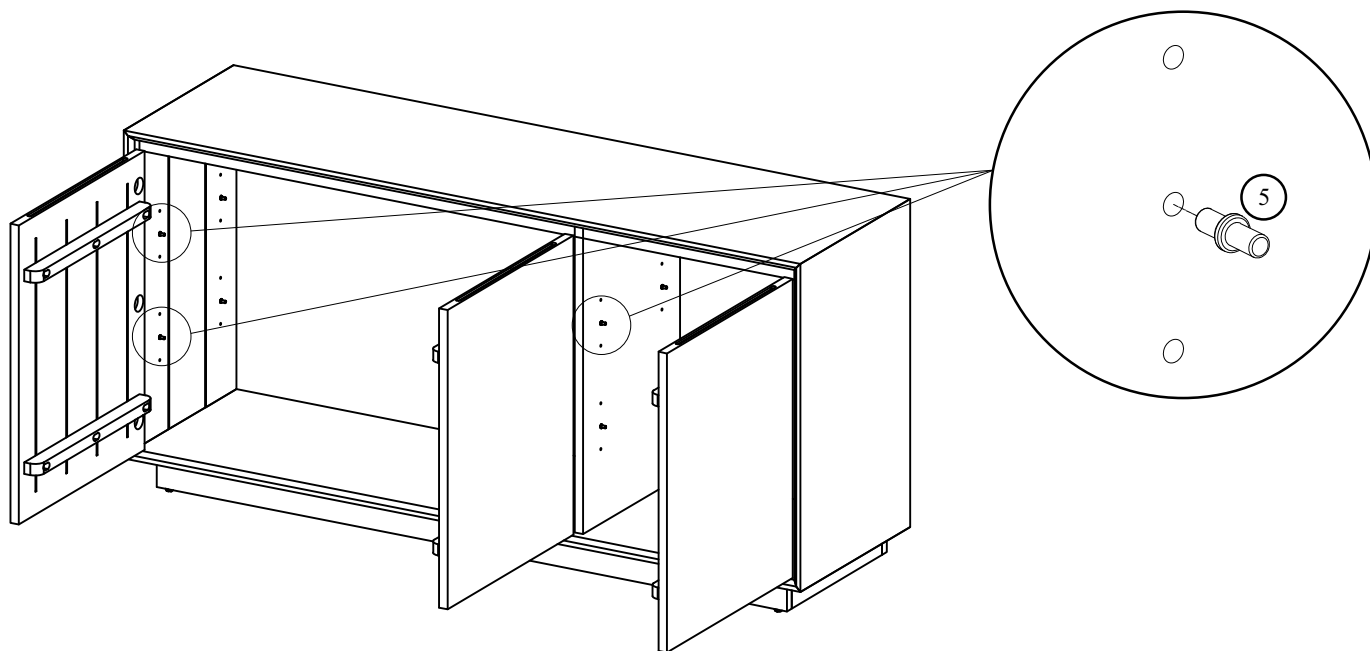


STEP 1

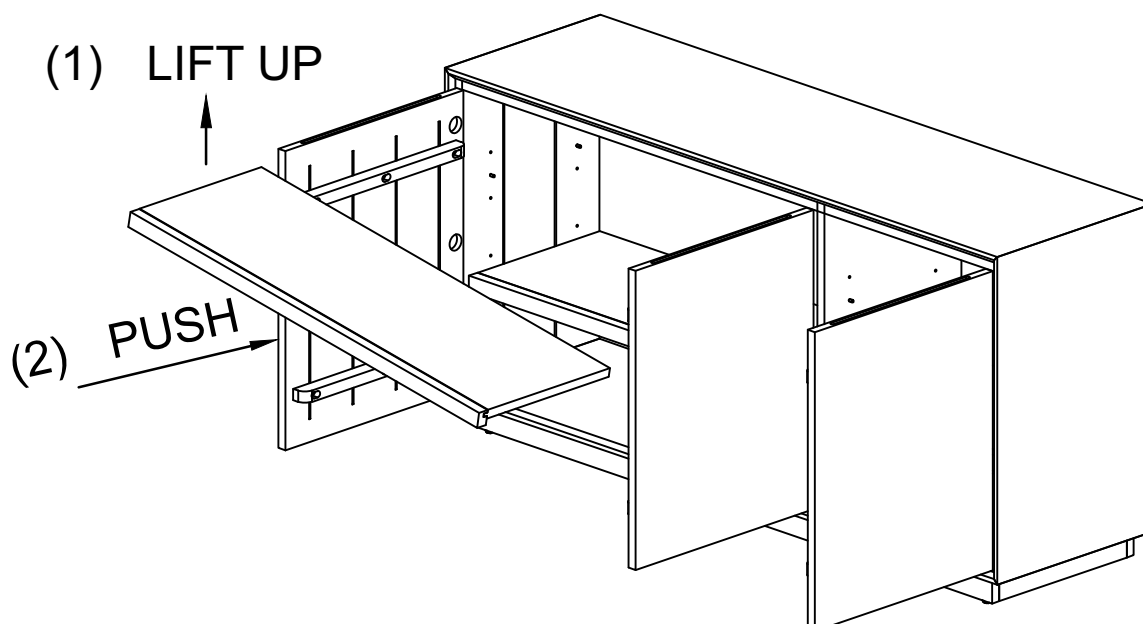


STEP 2

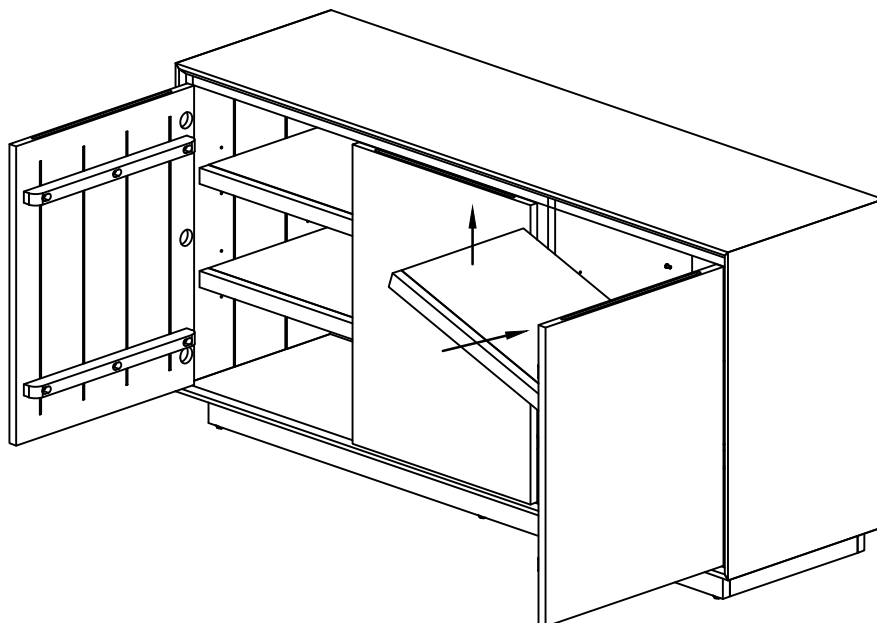


STEP 3

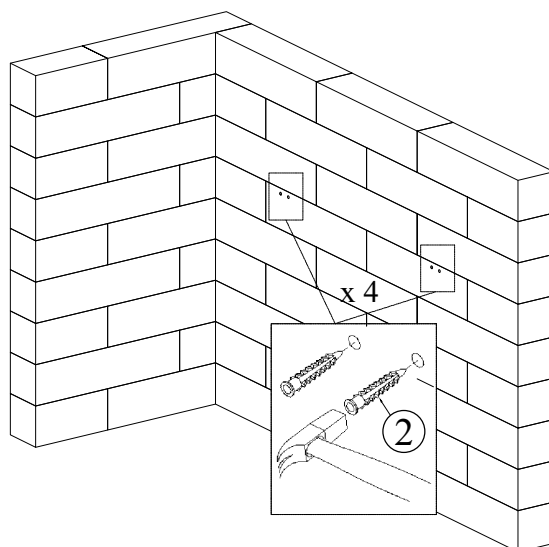

STEP 4

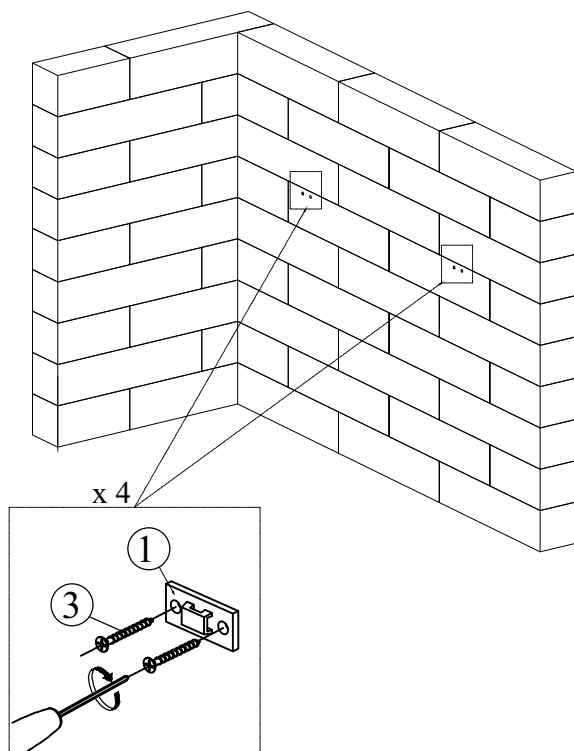

STEP 5

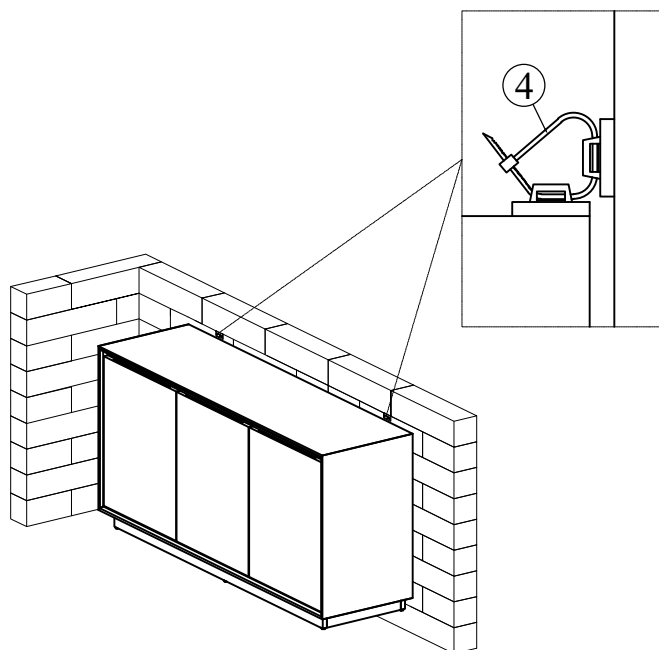

FINISHED