
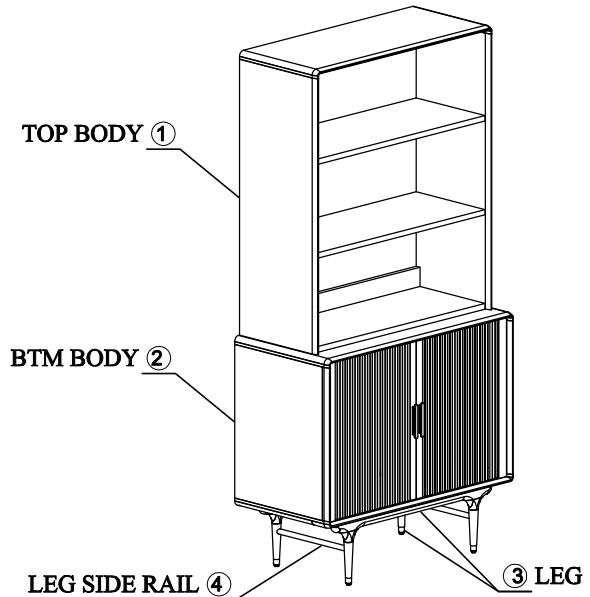






MANHATTAN BOOK CABINET

INSTRUCTION SHEET 1/4

- ~ Thank you for purchasing this quality product.
- ~ Please do not discard any of the packing material until you have checked all the part for fitting.
- ~ Before you begin to assemble your new piece of furniture, please check that all part have been supplied.
- ~ It is recommended that assembly is done on soft surface like carpet to avoid any damage.

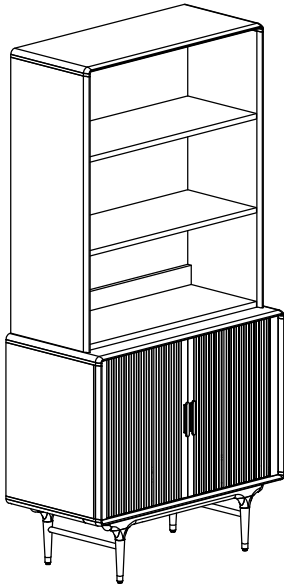

HARDWARE LIST			
NO.	DESCRIPTION		QTY.
A		ALLEN KEY M4	1 pc
LEG HARDWARE			
B		JCBC SCREW M6x40	8 pcs
		SPRING WASHER M6	8 pcs
		FLAT WASHER M6x12	8 pcs
BODY HARDWARE			
C		DOWEL M8x20	2 pcs
D		JCBC SCREW M6x30	6 pcs
		SPRING WASHER M6	6 pcs
		FLAT WASHER M6x17x2	6 pcs
ANTI TIPPING KIT			
E		FURNITURE TIPPING RESTRAINT	1 set





PARTS LIST			
NO.	DESCRIPTION		QTY.
1		TOP BODY	1 pc
2		BTM BODY	1 pc
3		LEG	2 pcs
4		LEG SIDE RAIL	2 pcs


TOOL REQUIRED (NOT PROVIDED)




PHILLIPS SCREW DRIVER

STEP 1
Assemble part (2) and (3) .

A	ALLEN KEY M4	×1
		
B	JCBC SCREW M6×40	×4
		
	SPRING WASHER M6	×4
		
	FLAT WASHER M6×12	×4
		

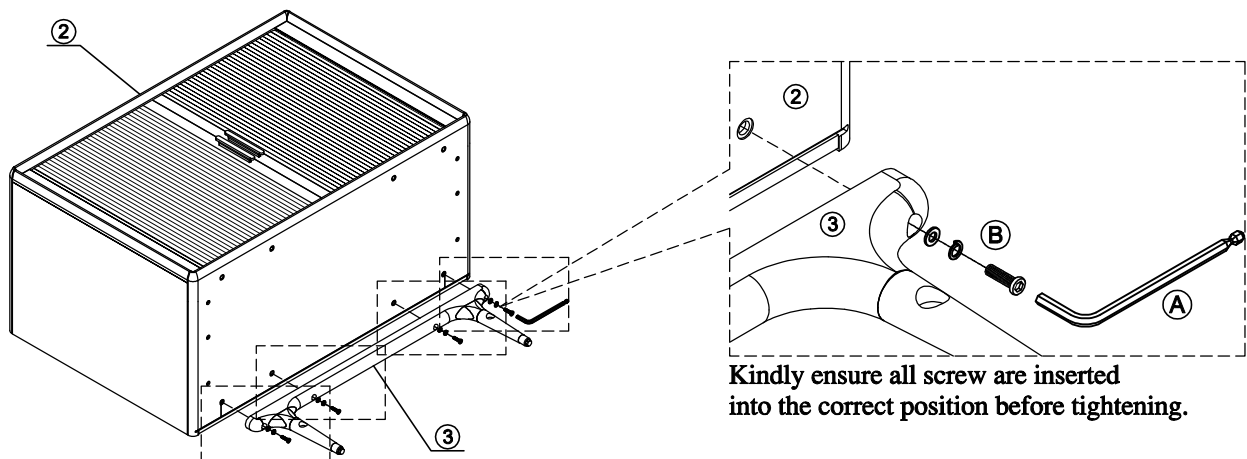

STEP 2
Assemble part (4) .

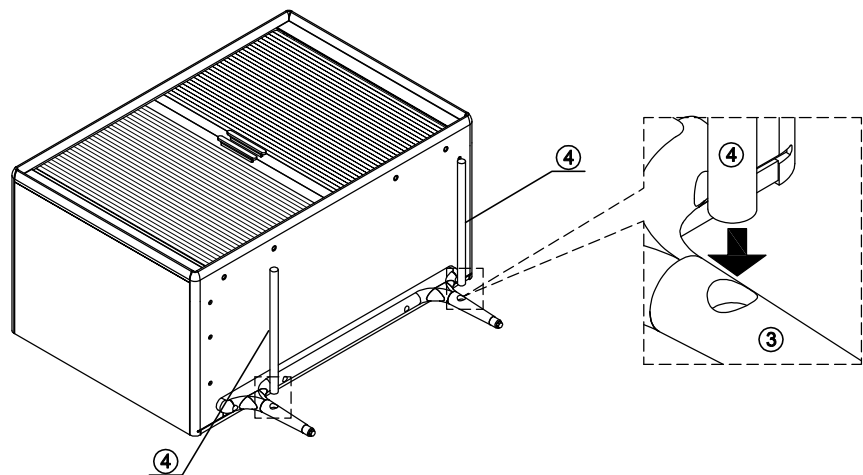




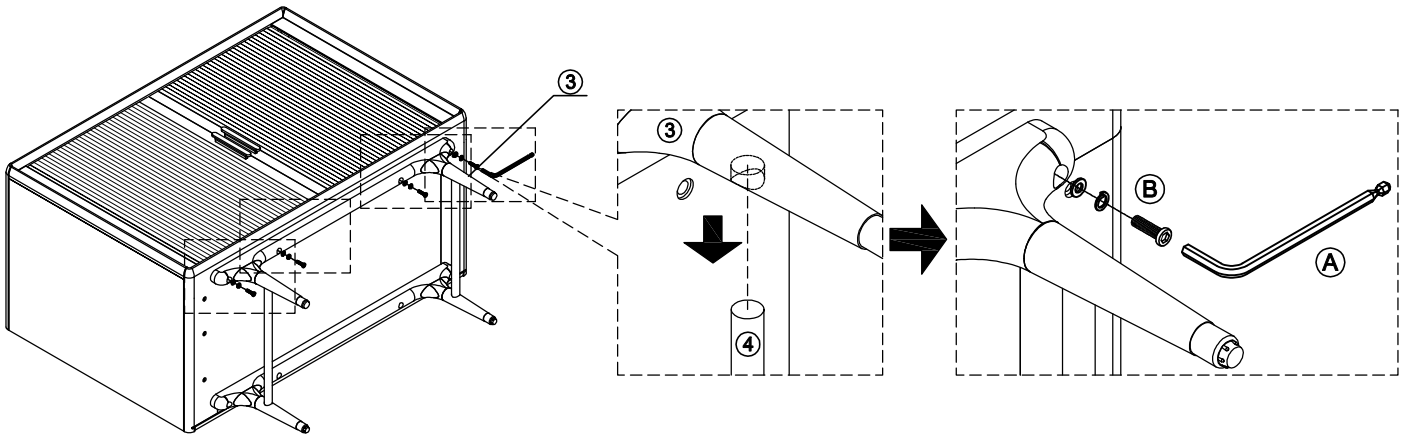
MANHATTAN BOOK CABINET

INSTRUCTION SHEET 3/4

STEP 3


Assemble part (3) .


A	ALLEN KEY M4	×1
		
B	JCBC SCREW M6×40	×4
		
	SPRING WASHER M6	×4
	FLAT WASHER M6×12	×4
		



STEP 4

Insert Dowel (C) .

C	DOWEL M8×20	×2
		

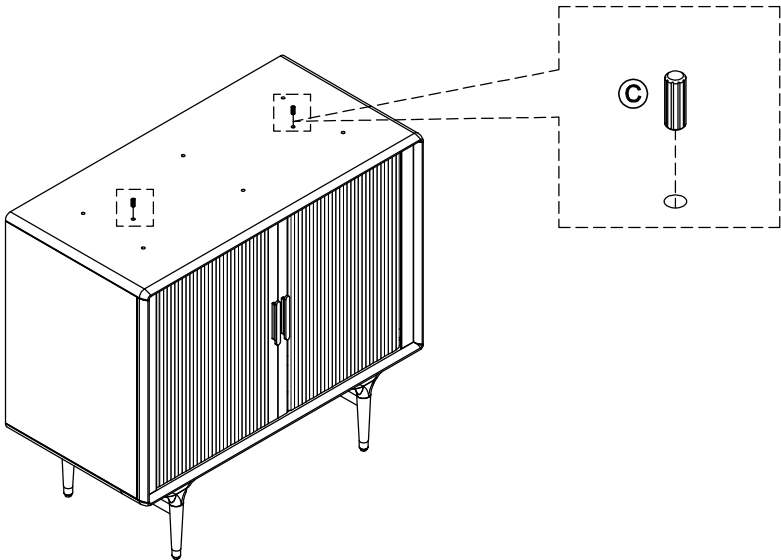


loungelovers

MANHATTAN BOOK CABINET


INSTRUCTION SHEET 4/4

STEP 5

Assemble part (1) .

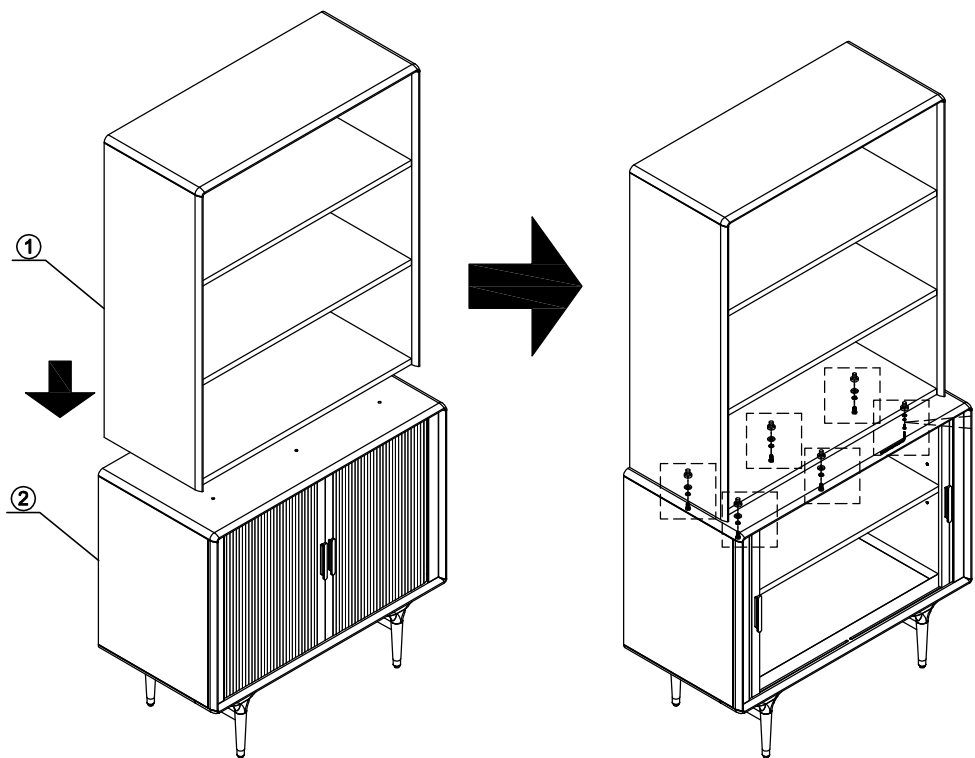


A	ALLEN KEY M4	×1
	JCBC SCREW M6×30	×6
D	SPRING WASHER M6	×6
	FLAT WASHER M6×17×2	×6

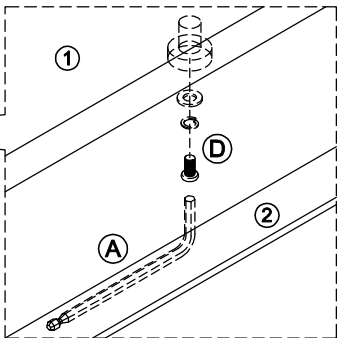

STEP 6

E	FURNITURE TIPPING RESTRAINT	×1

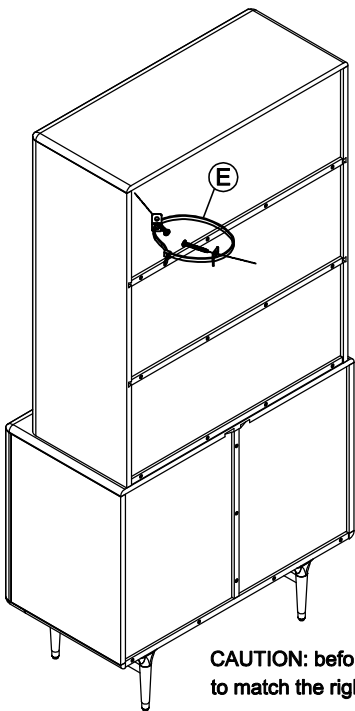

CAUTION: before wall assembling, be sure to match the right screws with the wall type.