

loungelovers

Assembly Instruction

Divano 2S

M6x45

Ø6



Ø6




A = 8

B = 8


C = 8

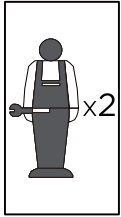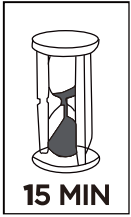

4mm


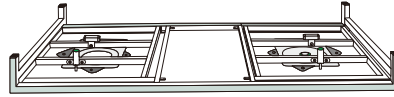



(1)=1






(2)=2

Step 1

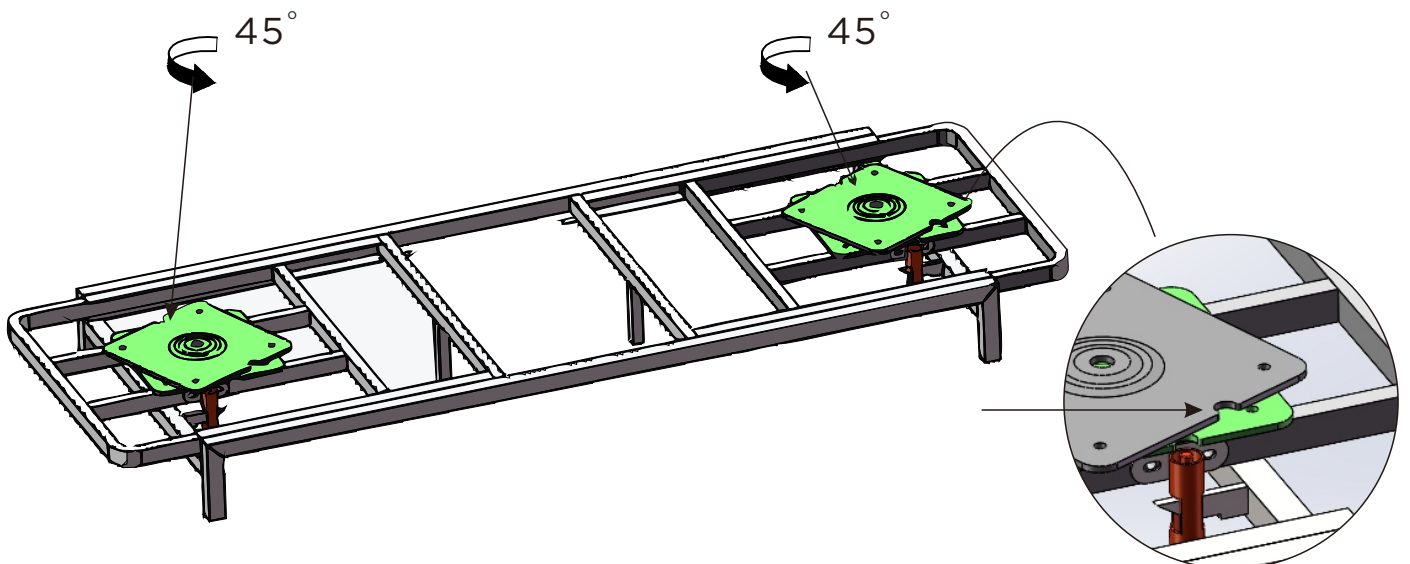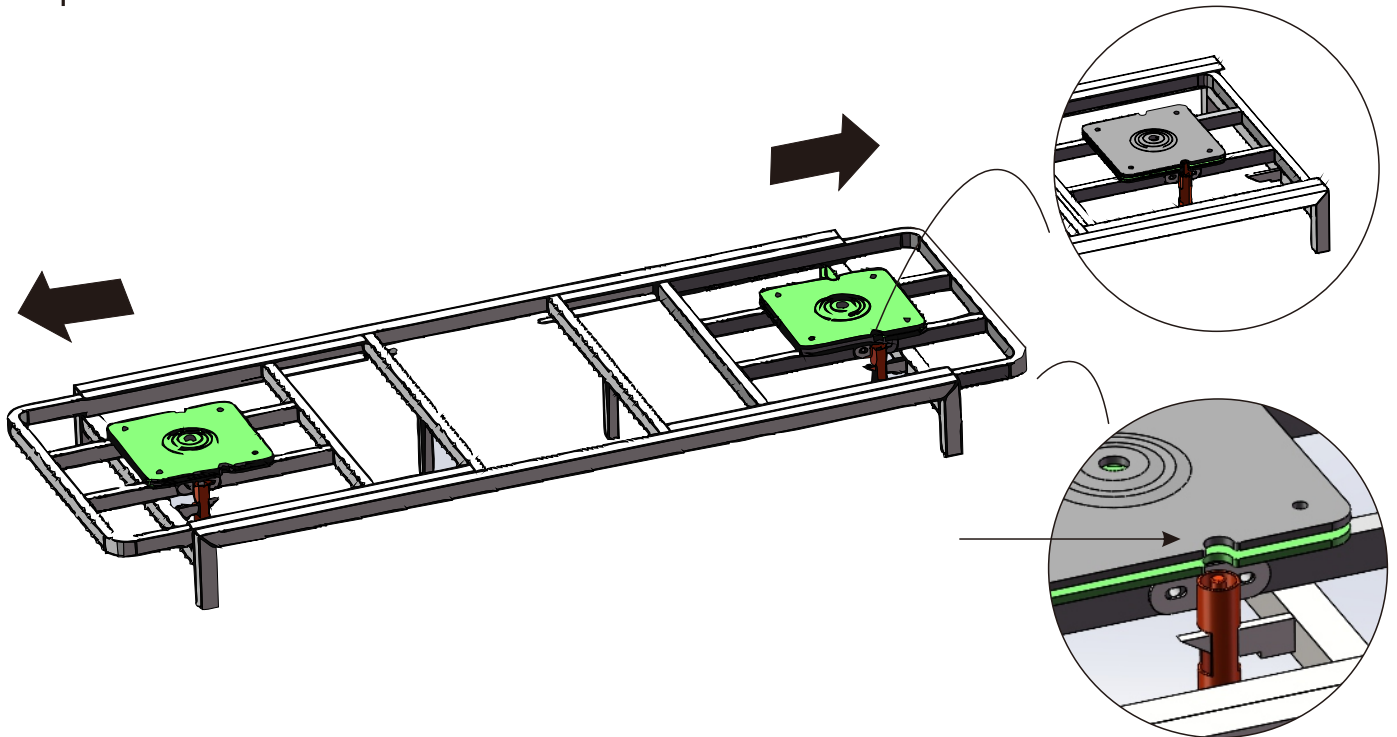



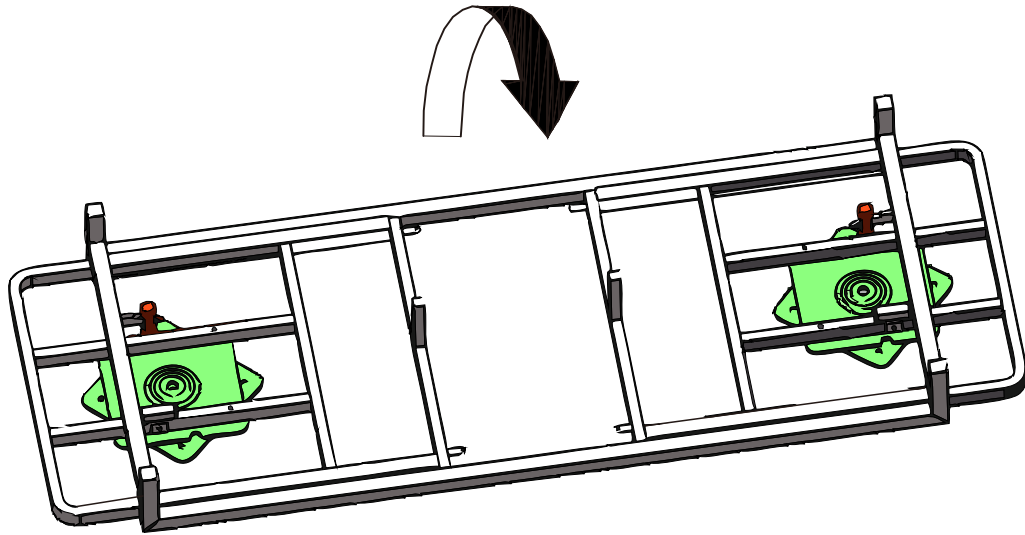


Step 2

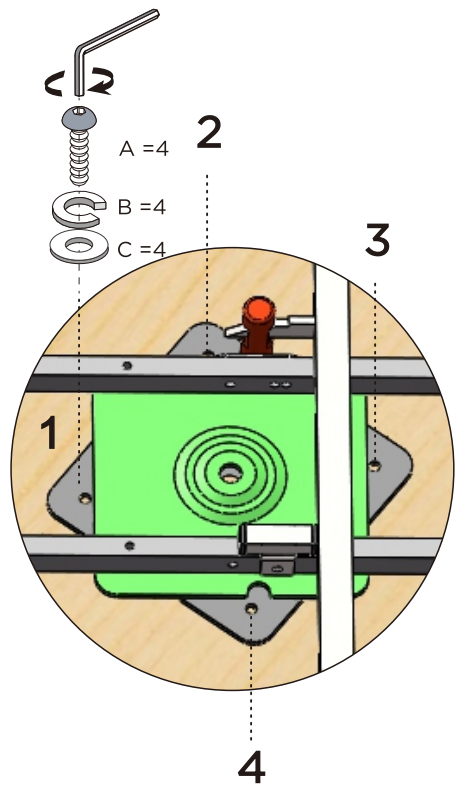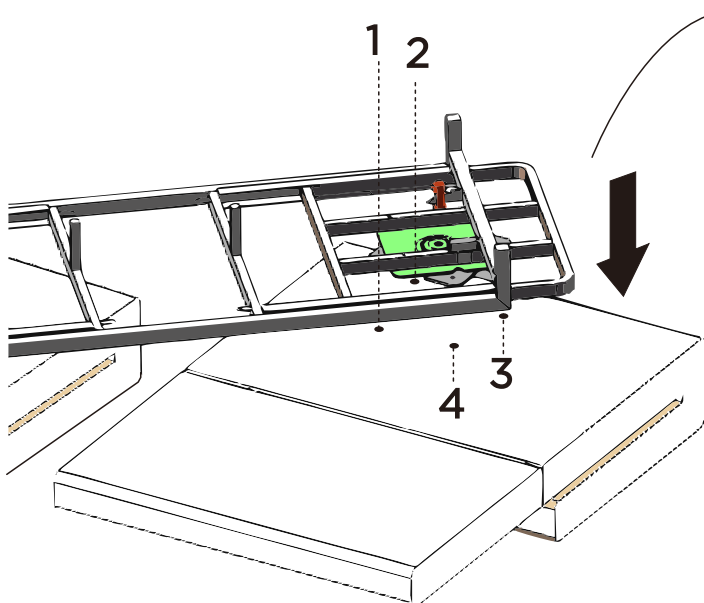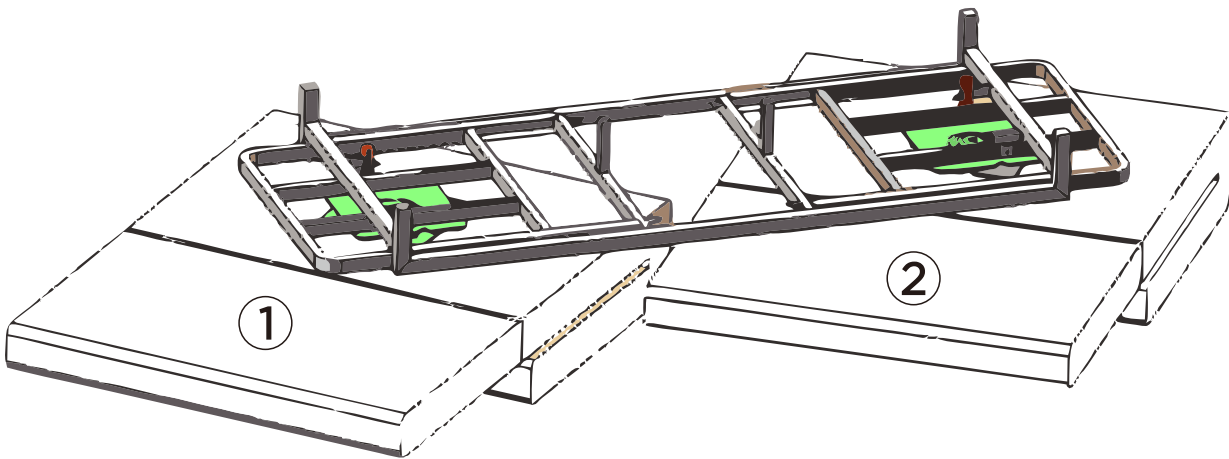


Step 3

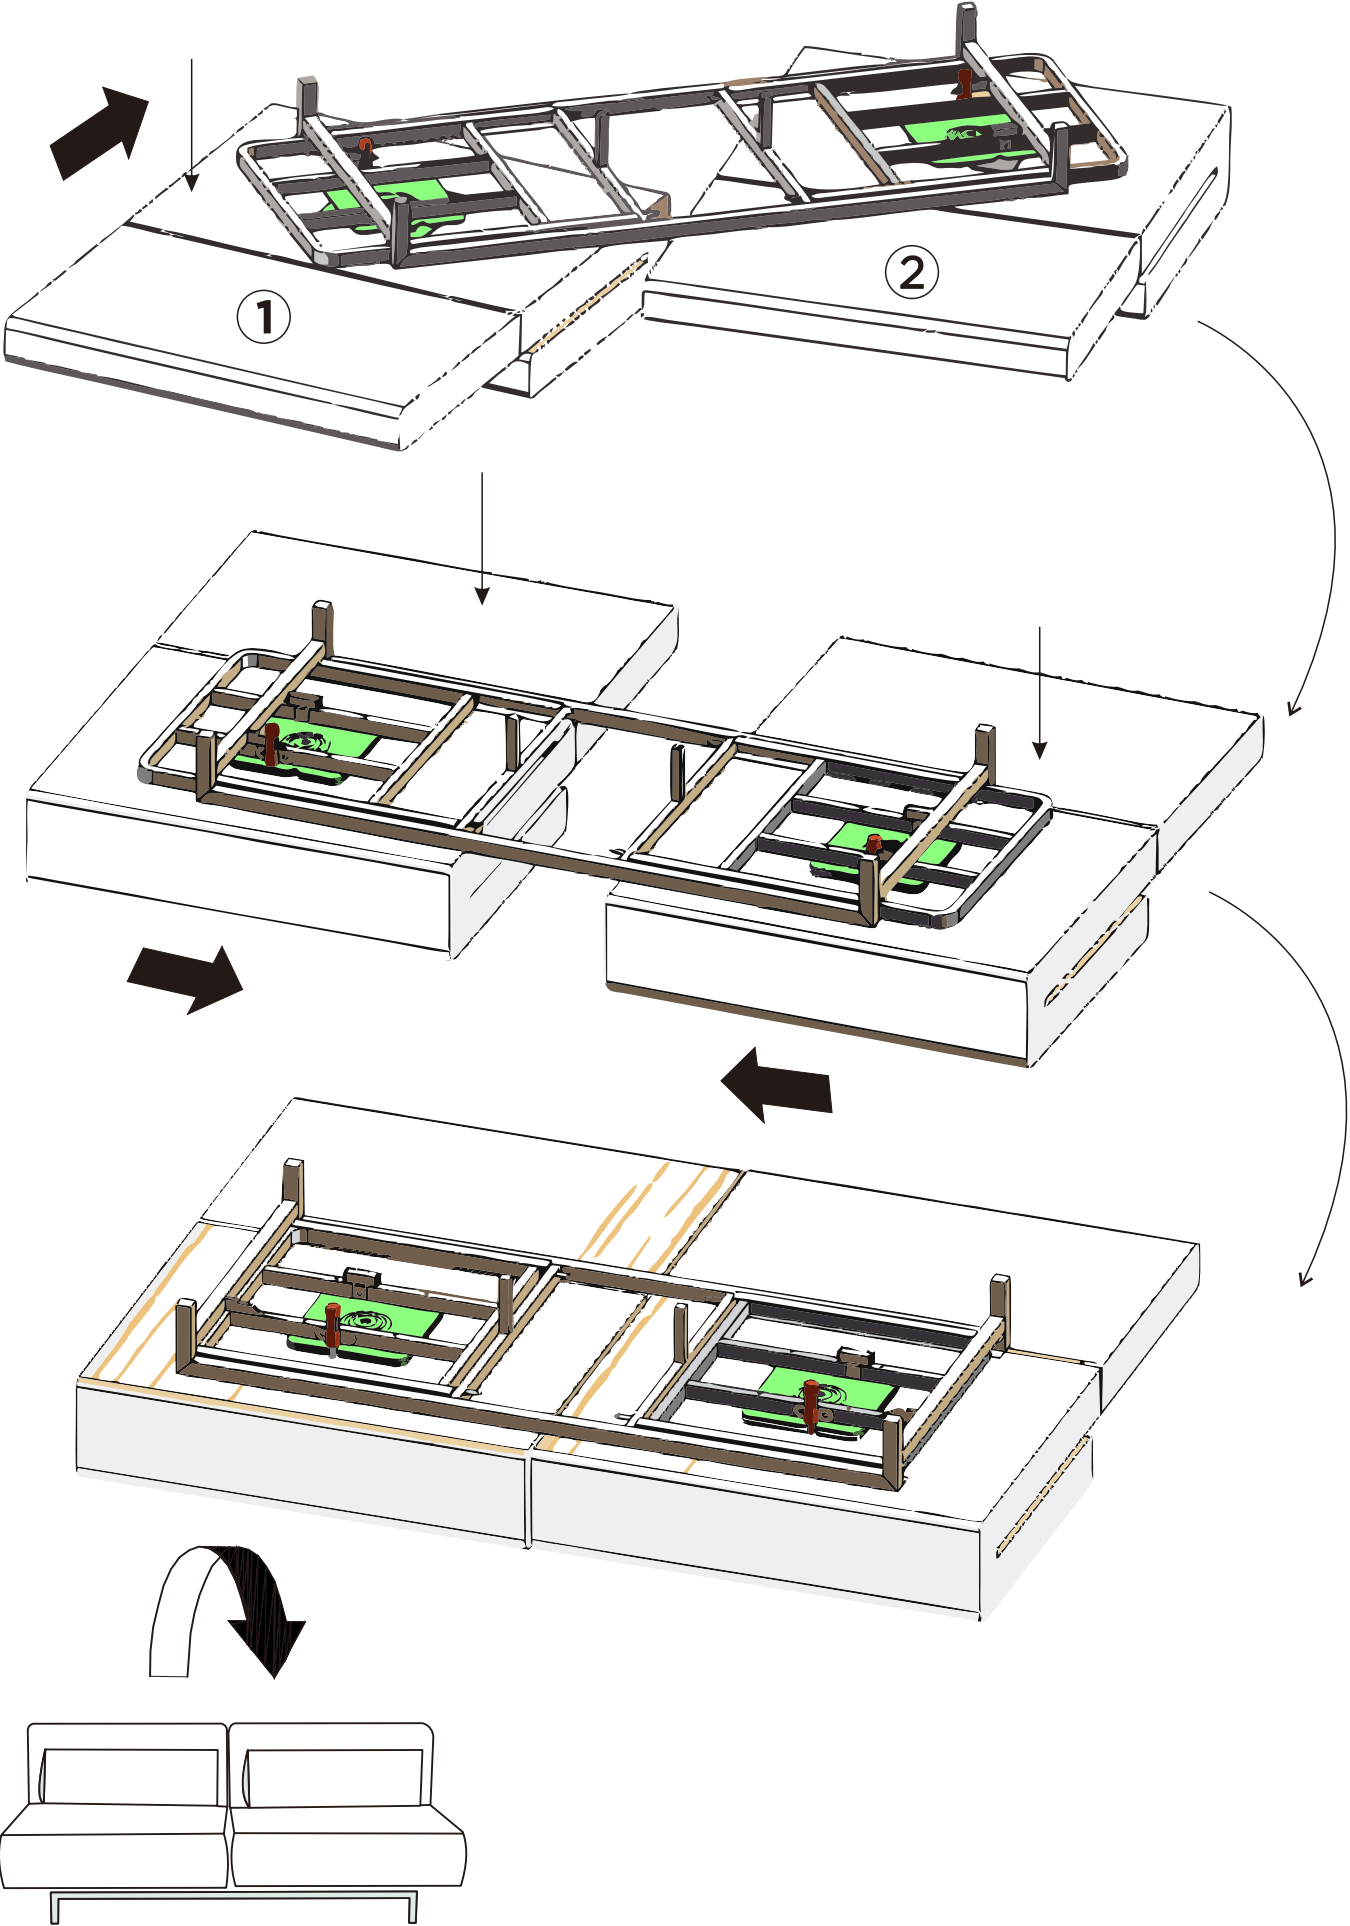


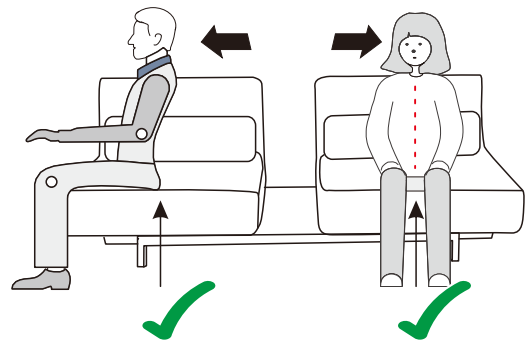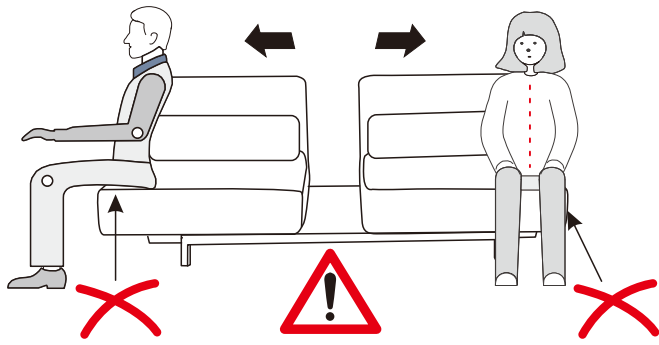


1

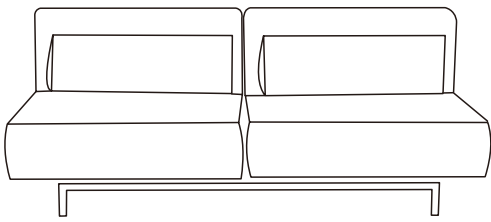


2

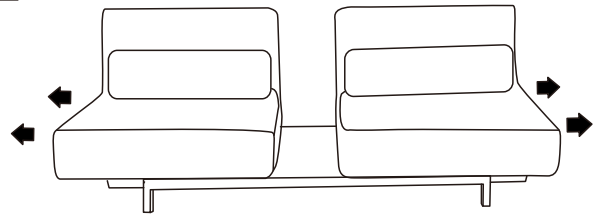


3

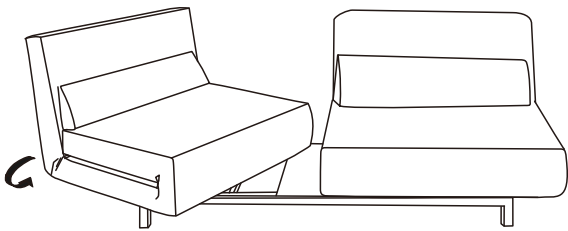


4

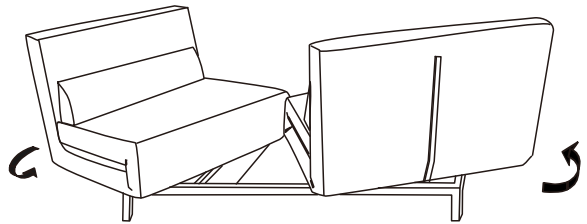


5

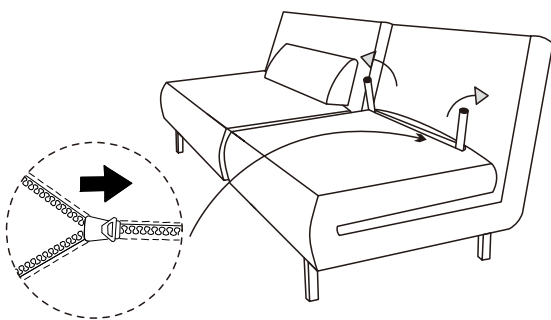

6

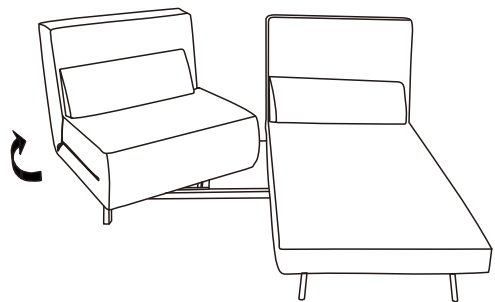

7

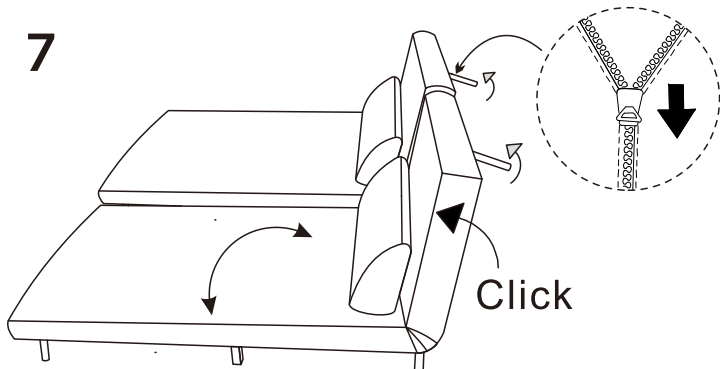

8

