


# lounge lovers





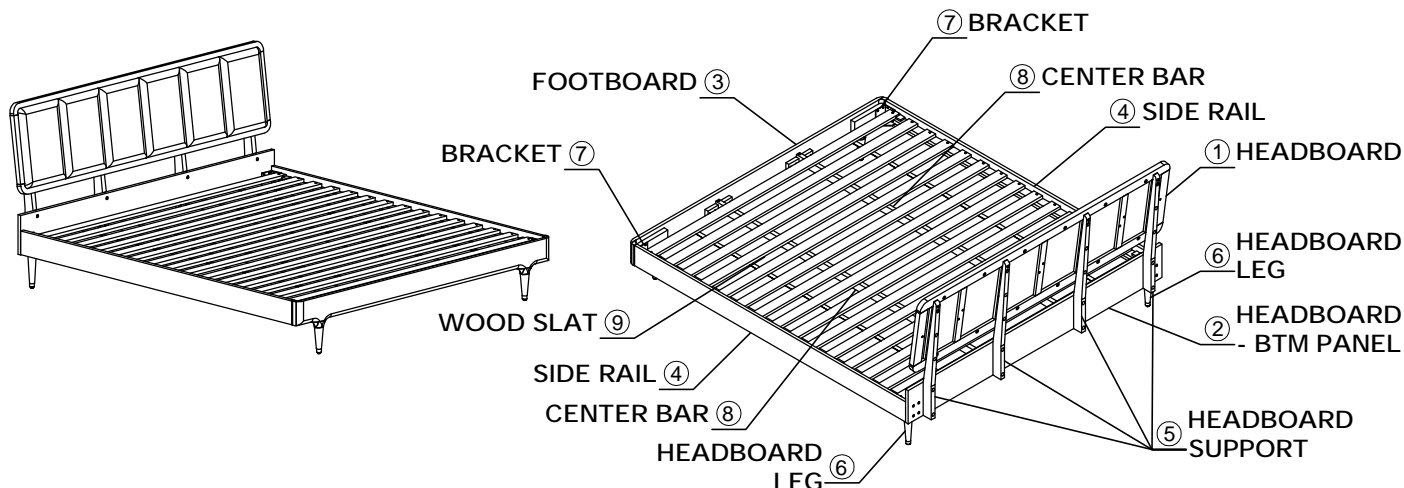





## MANHATTAN KING UPHOLSTERED

## INSTRUCTION SHEET 1/6

- ~ Thank you for purchasing this quality product.
- ~ Please do not discard any of the packing material until you have checked all the part for fitting.
- ~ Before you begin to assemble your new piece of furniture, please check that all part have been supplied.
- ~ It is recommended that assembly is done on soft surface like carpet to avoid any damage.



### HARDWARE LIST










NO.	DESCRIPTION	QTY.
A	 ALLEN KEY M4	1 pc
B	 ALLEN KEY M5	1 pc
SIDE RAIL HARDWARE		
C	 DOWEL M8x30	8 pcs
BRACKET HARDWARE		
D	 JCBC SCREW M6x20	32 pcs
	 SPRING WASHER M6	32 pcs
	 FLAT WASHER M6x17x2	32 pcs
HEADBOARD HARDWARE		
E	 JCBB SCREW M8x35	20 pcs
	 SPRING WASHER M8	20 pcs
	 FLAT WASHER M8x16x2	20 pcs
WOOD SLAT HARDWARE		
F	 THW CBS M4x30	30 pcs

TOOL REQUIRED (NOT PROVIDED)



PHILLIPS SCREW DRIVER



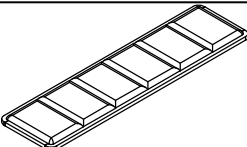

### PARTS LIST


NO.	DESCRIPTION	QTY.
1	 HEADBOARD	1 pc
2	 HEADBOARD - BTM PANEL	1 pc
3	 FOOTBOARD	1 pc
4	 SIDE RAIL	2 pcs
5	 HEADBOARD SUPPORT	4 pcs
6	 HEADBOARD LEG	2 pcs
7	 BRACKET	2 pcs
8	 CENTER BAR	2 pcs
9	 WOOD SLAT	1 pc

MADE IN MALAYSIA

**STEP 1**



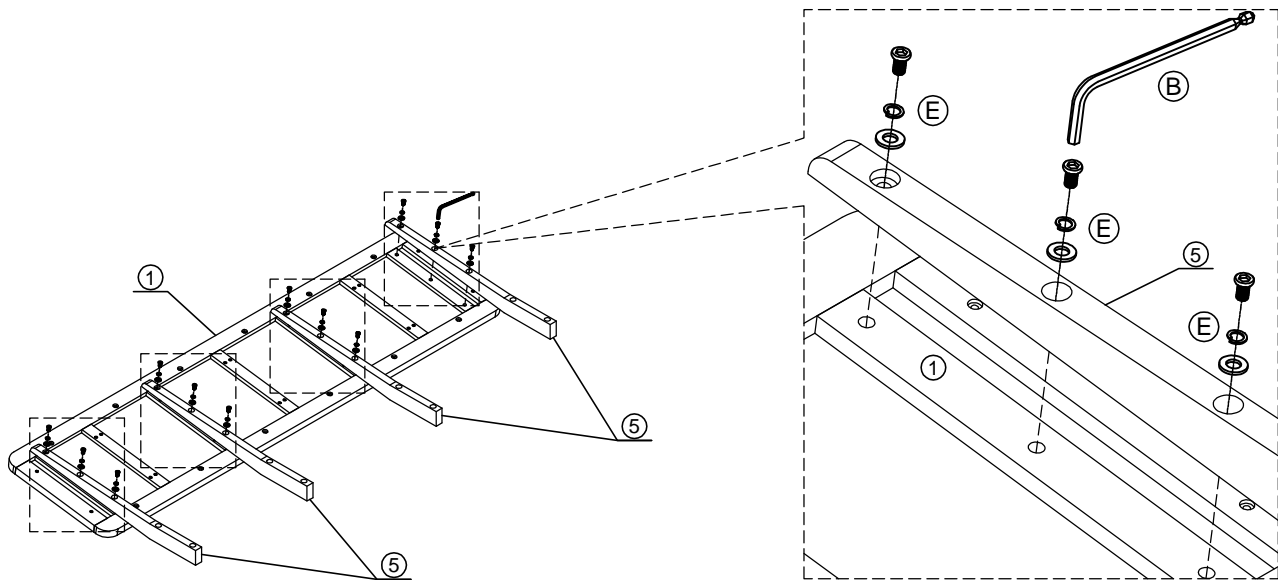

Assemble part (1) and (5).


B	ALLEN KEY M5	x1
		
E	JCBB SCREW M8x35	x12
		
	SPRING WASHER M8	x12
		
	FLAT WASHER M8x16x2	x12
		



**STEP 2**


Assemble part (2).

B	ALLEN KEY M5	x1
		
E	JCBB SCREW M8x35	x8
		
	SPRING WASHER M8	x8
		
	FLAT WASHER M8x16x2	x8
		

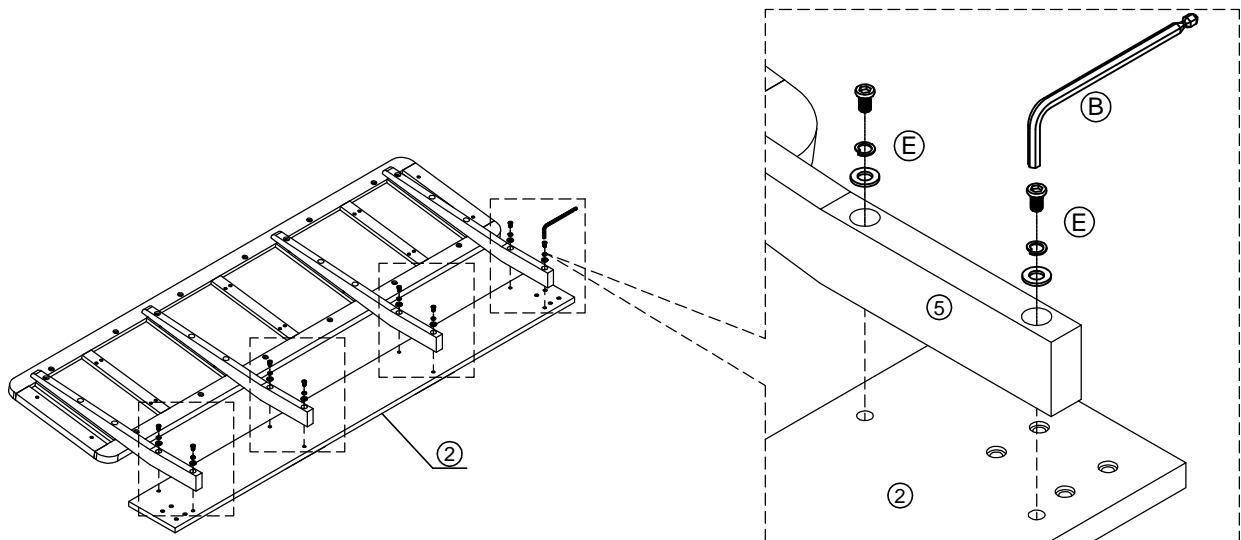


**STEP 3**  
Insert dowel (C).

C	DOWEL M8x30	x8
---	-------------	----

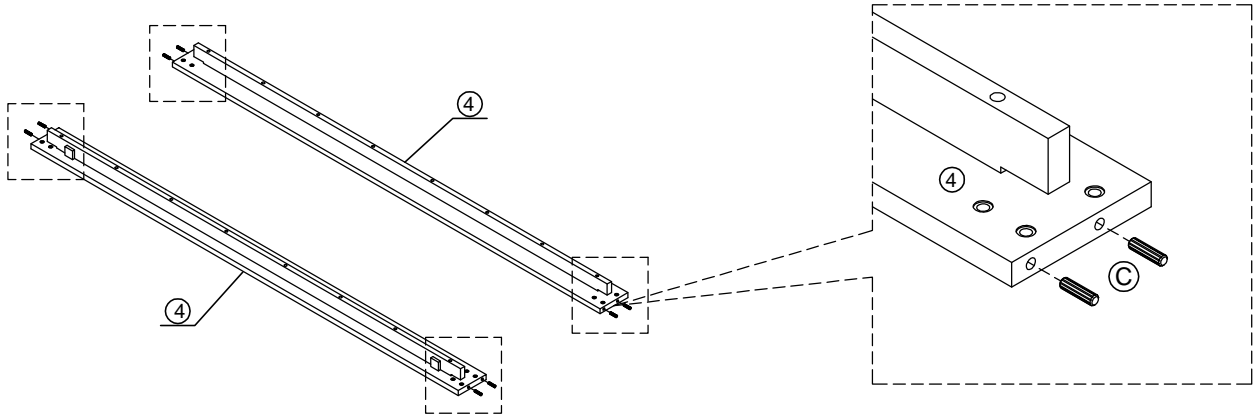


**STEP 4**  
Assemble part (4) and (7).


A	ALLEN KEY M4	x1
D	JCBC SCREW M6x20	x8
	SPRING WASHER M6	x8
	FLAT WASHER M6x17x2	x8

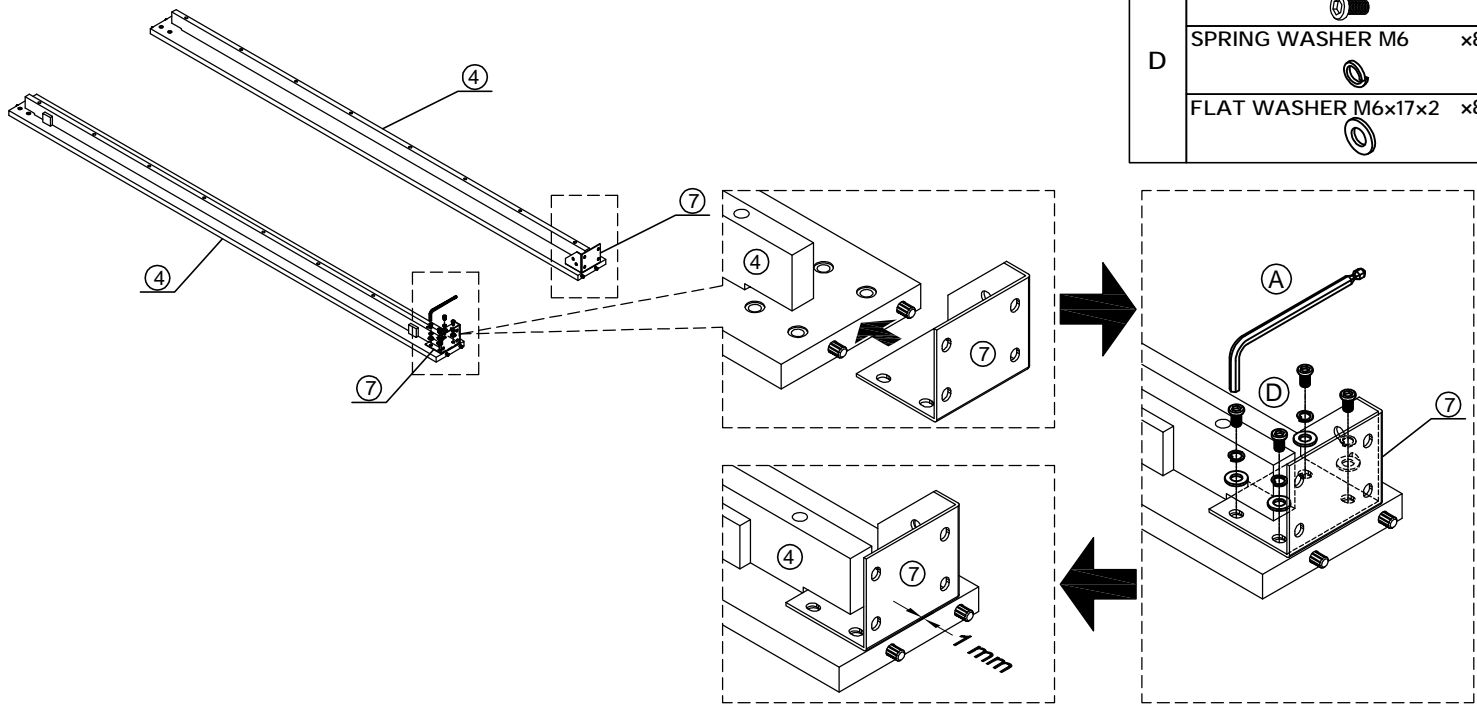

**STEP 5**  
Assemble part (4) and (6).

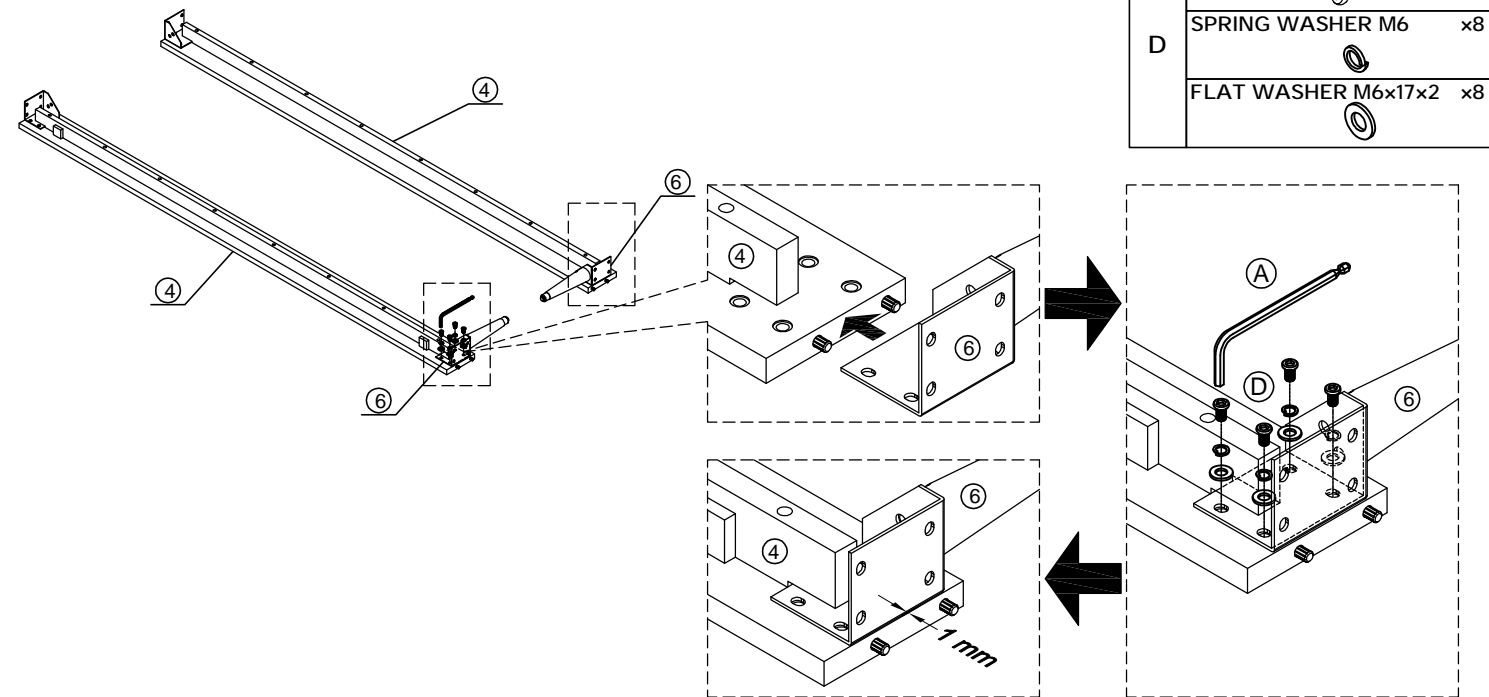

**STEP 6**  
Assemble part (4).

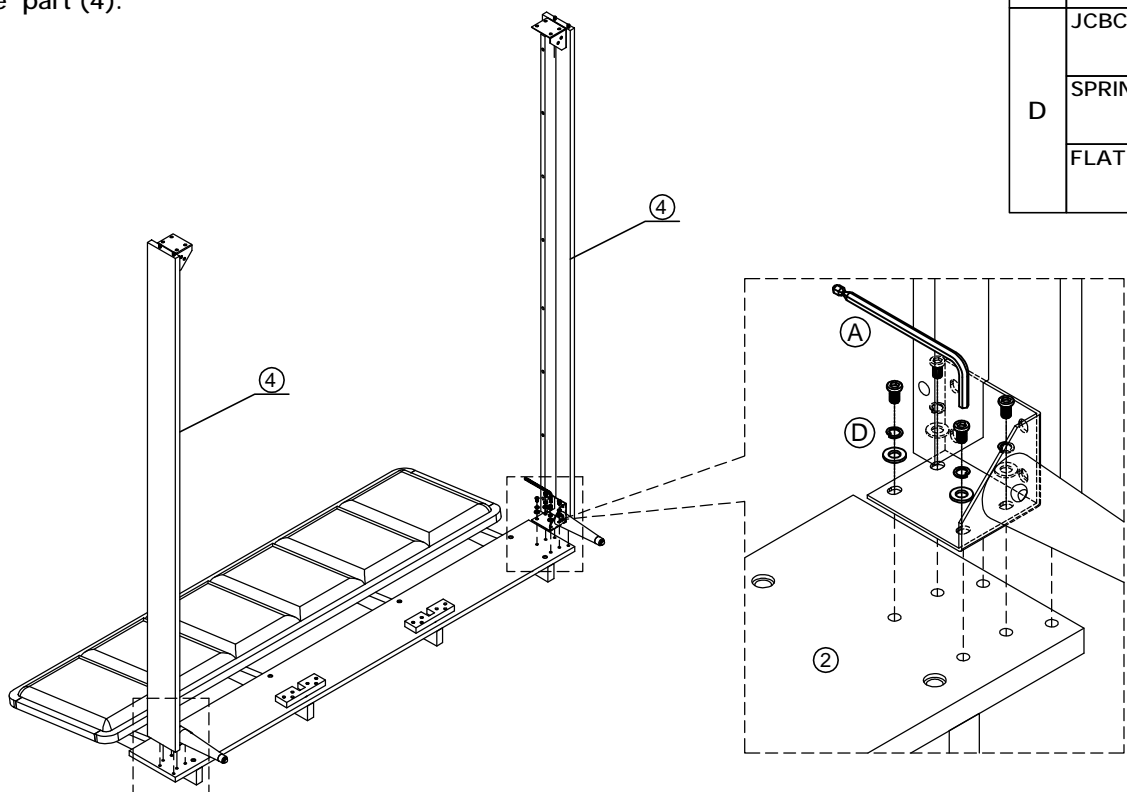


# loungelovers

MANHATTAN KING UPHOLSTERED

INSTRUCTION SHEET 5/6

**STEP 7**


Assemble part (3).

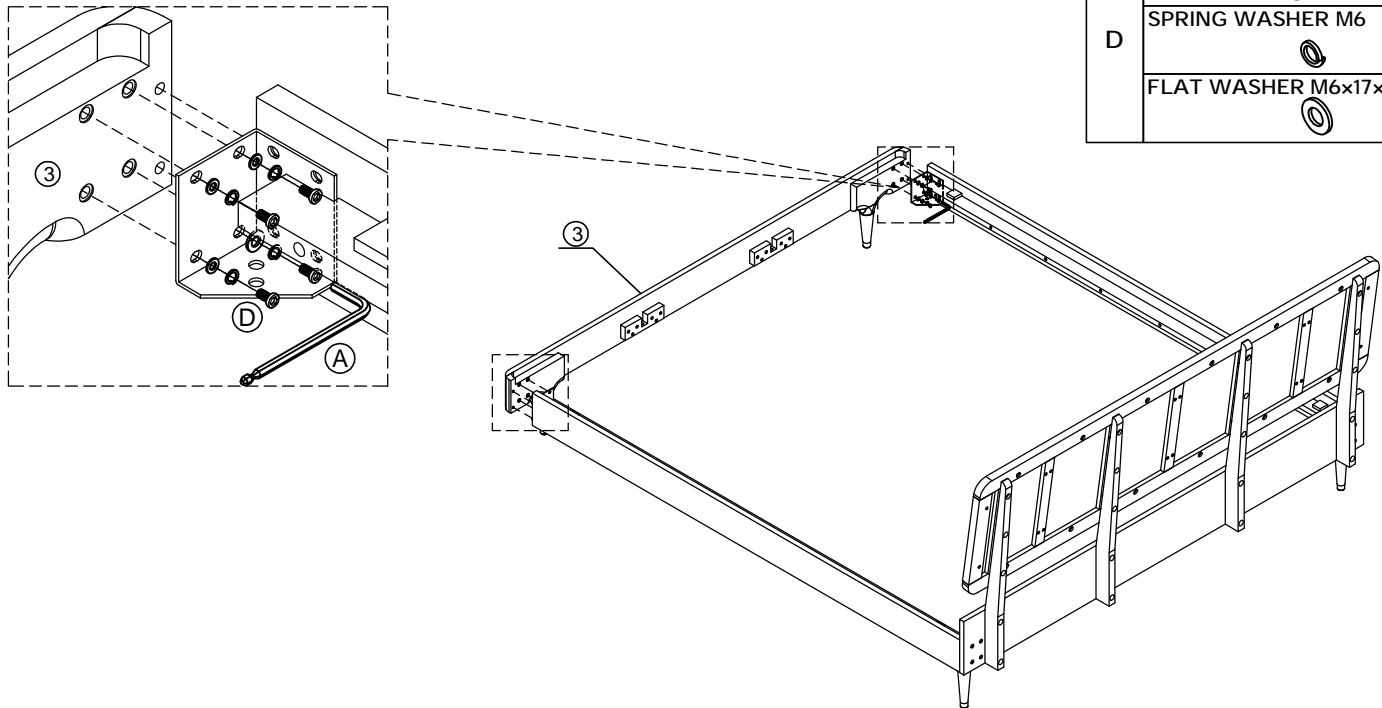

A	ALLEN KEY M4	x1
D	JCBC SCREW M6x20	x8
	SPRING WASHER M6	x8
	FLAT WASHER M6x17x2	x8

**STEP 8**

Assemble part (8).

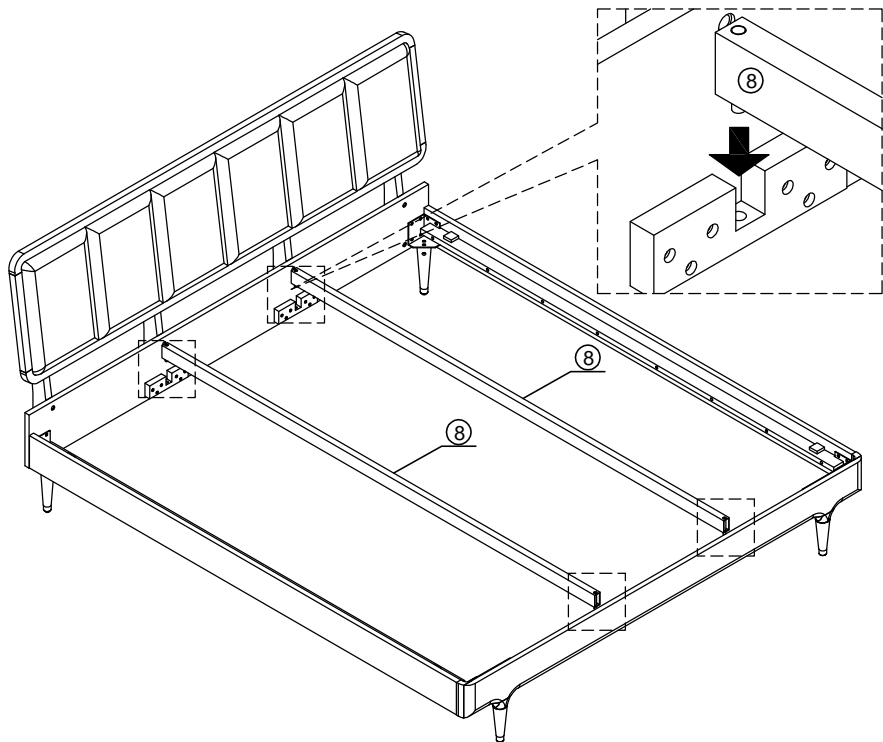

# loungeovers


MANHATTAN KING UPHOLSTERED

INSTRUCTION SHEET 6/6

## STEP 9

Assemble part (9).

F	THW CBS M4×30	x30
---	---------------	-----

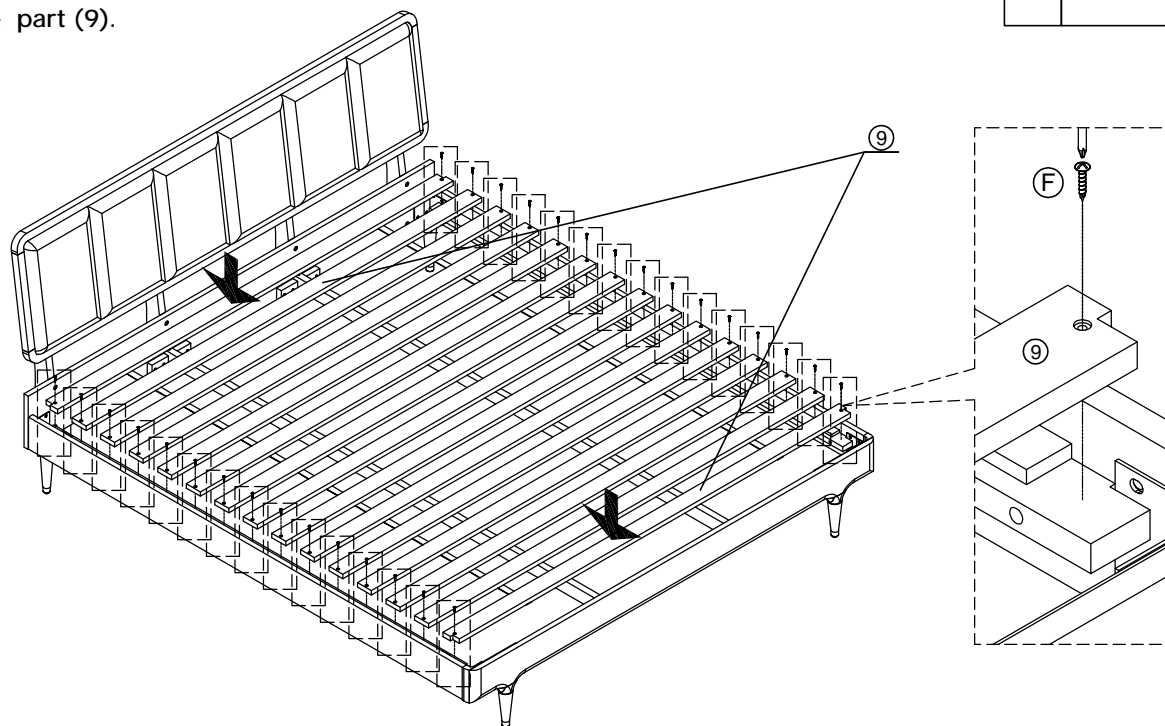

MADE IN MALAYSIA